
>Assembly Instructions

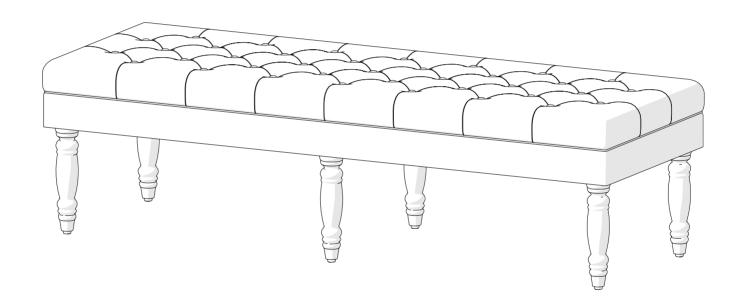

hardware

 
(A) x 4

5/16" x 2 3/8"
round hex screw





5/16" x 1 3/4" round hex screw





5/16" lock washer





7/8" flat washer





1/4" Ball end Hex wrench



The screw can be tightened in this step. (C) x 8 (B) x 8 (D) x 8 (E) x 1 1/4" Ball end 5/16" x 1 3/4" 7/8" flat washer 5/16" lock washer Hex wrench round hex screw

Don't tighten these two screws until next step. (C) x 2 (A) x 2 (D) x 2 (E) x 1 1/4" Ball end 5/16" x 2 3/8" 5/16" lock washer 7/8" flat washer Hex wrench round hex screw

This step can tighten all the screws. (C) x 2 (D) x 2 (A) x 2 (E) x 1 1/4" Ball end Hex wrench 5/16" x 2 3/8" 5/16" lock washer 7/8" flat washer round hex screw

step 4.


A friendly reminder from us:

Please keep the Allen wrench.



After a period of time, there may be a chance the KD furniture may become loose, please use an Allen wrench to tighten the loose bolts.

Put the chair right and check whether the chair has been well assembled. If it is not assembled, loosen the screw and tighten it on the ground.

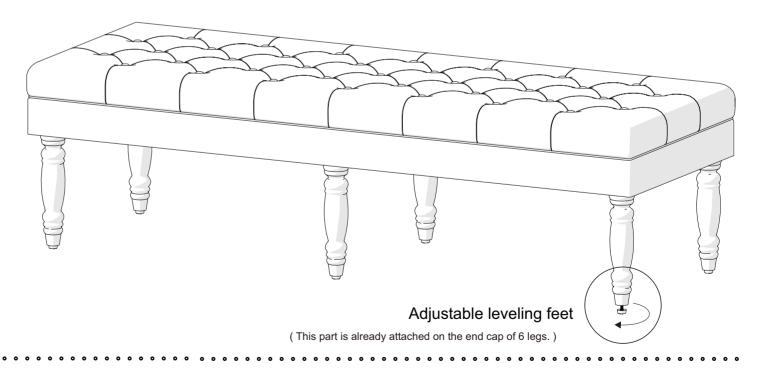

Level the furniture, use leveling feet if needed.